

Port Information Circular



Vehicle Update
 Parts Update
 Process Update
 Key Point
 Other

ORIGINATED FROM	REPORTED BY	DATE	YEAR/MODEL	DURATION DATE/VIN RANGE	PIC NUMBER
Port Quality	J. Dang	11/5/14	2015 CX-5/ Mazda 6	2015 Model Year	0012
TITLE	15MY CX 5 / Mazda 6 Electric Parking Brake				

Purpose: To communicate instructions on how to apply and release new electric parking brake for running model change on 2015 CX-5 and Mazda 6.

Instructions:




Applying Parking Brake


The parking brake can be applied regardless of the ignition switch position.

How to Apply Parking Brake:

- 1) Depress the parking brake pedal
- 2) Pull up the electric parking brake switch located next to the command switch
- 3) Ensure indicator light on the switch is turn **on**
- 4) Brake warning light indicator **appears** within the instrument cluster

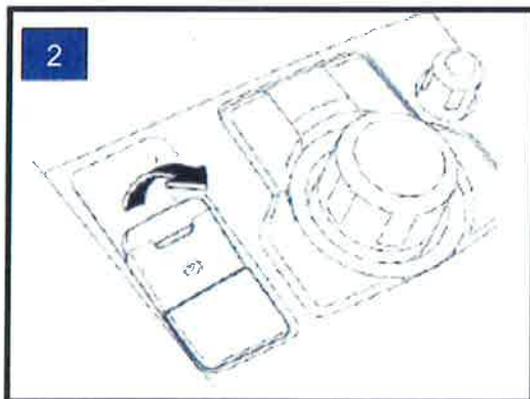

***Warning: Indicator light on the electronic switch will not turn on when the room fuse is installed. Use the brake warning light indicator to verify if electronic brake is applied.**

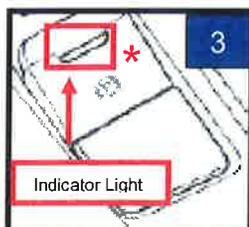

Distribution:

Pg. 1 of 2


X	Tacoma	X	National City	X	Baltimore	X	Jacksonville		Salamanca		Veracruz		Lazaro Cardenas
---	--------	---	---------------	---	-----------	---	--------------	--	-----------	--	----------	--	-----------------

Releasing Parking Brake

The electronic parking brake can be released while the ignition is switched ON or the engine is running.

How to Release Parking Brake:

- 1) Depress the parking brake pedal
- 2) Press down on the electric brake switch located next to the command switch
- 3) Ensure indicator light on the switch is turn **off**
- 4) Brake warning light indicator **disappears** within the instrument cluster

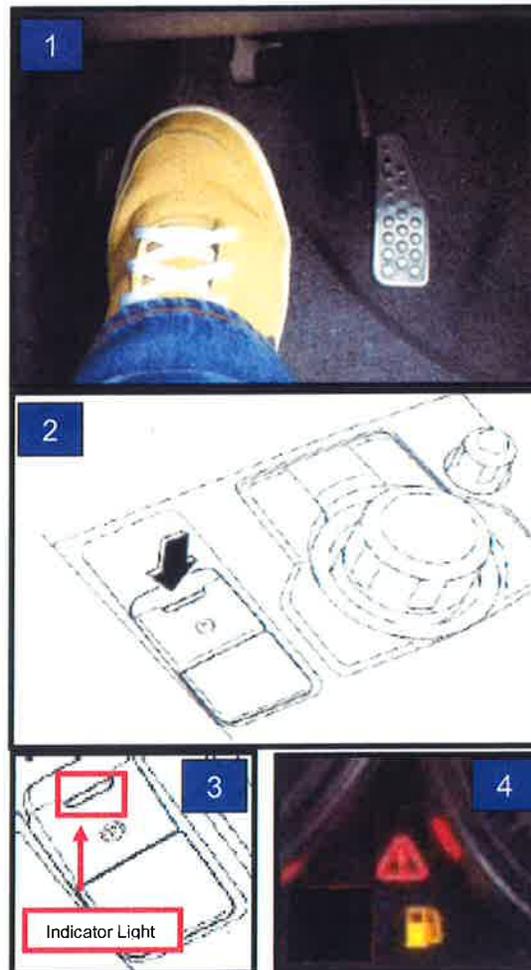

Electric Brake Automatic Release:

If the accelerator pedal is depressed with the electric parking brake applied and all the following conditions are met, the parking brake is released automatically:

- The engine is running
 - The driver's door is closed
 - The driver's seat belt is fastened
- (Manual transmission)*
- The shift stick is in a position other than neutral
 - The clutch pedal is depressed halfway
- (Automatic transmission)*
- Gear shift lever is in D, M or R position

Additional References/Background: None

Distribution:

Pg. 2 of 2

X	Tacoma	X	National City	X	Baltimore	X	Jacksonville		Salamanca		Veracruz		Lazaro Cardenas
---	--------	---	---------------	---	-----------	---	--------------	--	-----------	--	----------	--	-----------------