

MOVE

- 1) Place machine in transport setting by pushing button A. This will disable all hydraulic functions not related to the transmission, steering, and brakes.
- 2) Take machine out of 'Park' by pressing button B.



STOP

- 1) Place the hydro handle in the 'Neutral' position.
- 2) Select 'Slow' (G) engine speed
- Turn ignition key to the 'Off' (A) position.
 IMPORTANT: Park brake will automatically engage when the engine stops.
- 4) Remove key from ignition and place it in the cup holder.
- 3) Select gear speed. The transport setting selected in step 1 will prevent operator from selecting 1st gear.
 - a. C. 1st Gear (SLOW) (May not be able to select)
 - b. D. 2nd Gear (MEDIUM)
 - c. E. 3rd Gear (FAST) (May not be present on all machines)
- 4) Select Engine Speed. Indicator lights (F) will show the current speed selection.







- 5) Move the hydro handle in the direction you wish to travel. Be sure to grip the handle from the side. Do not grip the handle from the top.
 - IMPORTANT: Further you move the handle the faster the machine will travel in that direction. Placing the hydro handle in the 'Neutral' will stop the machine and prevent it from moving.







Forward Neutral Reverse

DO NOT AT ANY TIME USE THE BRAKE PEDALS TO CONTROL THE SPEED OF THE MACHINE. BRAKES ARE FOR EMERGENCY STOPPING ONLY. USE HYDRO HANDLE TO CONTROL THE FORWARD AND REWARD MOTION OF THE MACHINE.

PAGE 2 OF 2

CREATED 5/21/14